



Quick Start Guide



Cisco Small Business

Unified Communications UC320W with FXO

Package Contents

- Unified Communications System
- Ethernet Network Cable
- Phone Cable
- Power Adapter
- Power Cord Retention Kit
- Quick Start Guide
- Phone Quick Reference Card
- Product CD-ROM

CAUTION Be sure to read Section 1 before installation.

Welcome

Thank you for choosing the Cisco Small Business Unified Communications Model UC320W. This guide describes how to install the equipment and get started configuring the system.

1 Before You Begin

Minimum Requirements

- PC with web browser and Adobe Flash Player version 10.1 or later.
- Cisco SPA300 Series or Cisco SPA500 Series IP phones.
- Power adapters for the phones, as needed. Cisco SPA300 Series phones always require power adapters. Cisco SPA500 Series phones can receive power from a Power over Ethernet switch.
- Ethernet cables to connect IP phones and computers.
- Internet service.
- Voice over IP service or analog phone service.

Default Settings

Parameter	Default Value
Username	cisco
Password	cisco
LAN IP (Also the address for the web-based configuration utility.)	192.168.10.1
DHCP Range (DHCP server is enabled by default.)	192.168.10.100 to 149
Netmask	255.255.255.0
Voice VLAN	100
Default Voice VLAN Subnet	10.1.1.1

NOTE Be sure to update to the latest firmware when asked at the beginning of the installation.

CAUTION Before installing the Cisco UC320W into an existing network with another DHCP server, refer to the Smart Designs (see links on [page 7](#)). Carefully follow the instructions in this guide and in the UC320W Simple Configuration Utility. IP address conflicts will result if two DHCP servers are installed on your network.

Optional Equipment and Services

- **Secure router for Internet access:** Cisco recommends using a secure router, such as a Cisco SRP500 Series Services Ready Platform or a Cisco SA500 Series Security Appliance.
- **Additional ports for IP phones and network devices:** Connect a Cisco ESW500 Series Power over Ethernet Switch to a LAN port. Other switches may be used but may require configuration of VLAN and QoS settings. Refer to the VLAN information in [Default Settings, page 2](#). For application notes, see the documentation links in [Where to Go From Here, page 7](#).
- **Additional ports for analog devices and analog phone lines:** Add up to two Cisco SPA8800 IP Telephone Gateways with 4 FXO ports and 4 FXS ports. All added FXS ports count toward the 24 user maximum. A device connected to the Cisco UC320W built-in FXS port (shown below) is not counted.
- **ISDN BRI service:** Install a Mediatrix™ 4400 Digital Gateway, Connect both the Cisco UC320W and the BRI gateway to a secure router such as Cisco SA500. For application notes, see the documentation links in [Where to Go From Here, page 7](#).
- **Power cord retention kit:** To prevent accidental removal of the power cord, you can install the supplied power cord retention kit (not illustrated). Remove the screw next to the power port. Connect the clamp to the power cord. Insert the screw and install it onto the Cisco UC320W. For detailed instructions, see the Cisco UC320W administration guide.

NOTE For best results, install the latest firmware for any network devices, such as routers and Ethernet switches, before proceeding.

2 Installing the Equipment and Configuring the System

STEP 1 Before you begin, gather the following information:


- Account information from your Internet Service Provider
- Phone numbers and account information for all phone services
- Names and phone settings for your users and groups
- Details for telephony features such as internal dialing, call routing, and Auto Attendant

STEP 2 Connect a network cable from the WAN port of the Cisco UC320W to your Internet Service or Internet access device.

STEP 3 Connect the supplied power cord to the POWER port and to a power outlet.

When the device is fully booted, the POWER/SYS light is steady green.

STEP 4 Connect your PC to a LAN port on the Cisco UC320W. **Do not connect any devices to the LAN ports at this point.** Your PC will receive an IP address in the 192.168.10.x range.

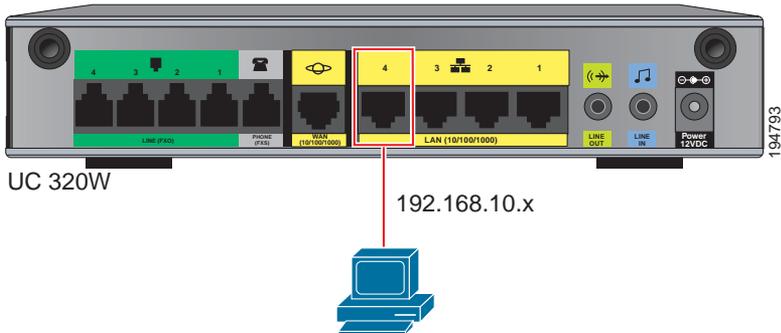

NOTE:

- You may need to adjust your PC's connecting settings to receive an IP address dynamically.
- For best results, set the screen resolution to 1024x768 or higher.

STEP 5 Start a web browser. In the Address bar, enter the IP address of the Cisco UC320W (default **192.168.10.1**).

STEP 6 To log in, enter the username **cisco** and the password **cisco**. Both the username and the password are case sensitive.

STEP 7 When prompted, enter a new username and password. Neither *cisco* nor *admin* is valid.

STEP 8 Follow the instructions in the configuration utility to connect the equipment and configure the system.

Notes:

- If you are installing the Cisco UC320W in a network with another DHCP server, be sure to complete the Network Topology step in the Getting Started menu.
- For best results, enable access to Cloud Services and accept all available firmware updates.

3

Getting to Know the Cisco UC320W

Installation Guidelines


- Ensure adequate air flow.
- Do not stack or place anything on top of the Cisco UC320W, or install it on a hot surface.
- Ensure that the Cisco UC320W is secure and stable.

NOTE For mounting options, see the Cisco UC320W administration guide.

Environmental Considerations

- Storage Temperature (sea level): -22° F to 140° F (-30° C to +60° C)
- Operating Temperature (sea level): 32°F to 104°F (0°C to 40°C)
- Relative Humidity (sea level): 5 to 95% RH (non-condensing)


Front Panel

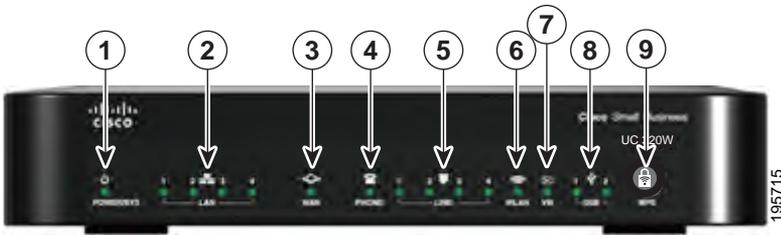

1	POWER/SYS On - Normal operation. Slow flashing - Booting up. Fast flashing - Upgrading firmware. Off - No power.
2	LAN On - Connected to a device. Flashing - Sending or receiving data. Off - Not connected.
3	WAN On - Connected to WAN. Flashing - Sending or receiving data. Off - Not connected.
4	PHONE (FXS) On - Service is available on the port, and the port is not in use. Slow Flashing - Service is available and the attached phone is off hook (in use). Off - The port is disabled.
5	LINE (FXO) On - PSTN line loop detected. Slow Flashing - FXO port is in use. Off - Not connected.
6	WLAN On - Wireless radio is on. Flashing - Sending or receiving data. Off - Disabled.
7	VM On - Voice mail is enabled. Fast Flashing - System is full. Slow flashing - Retrieving or recording voice mail. Off - Disabled.
8	USB For future use.


9	WPS On - WiFi Protected Setup succeeded. Slow flashing - Setup is in progress. Fast flashing - Setup error. Off - Not in use. To configure a WiFi connection by using WPS, make sure the wireless device is located near the Cisco UC320W, and then press and hold this button until the WPS light flashes.
---	---

Back Panel

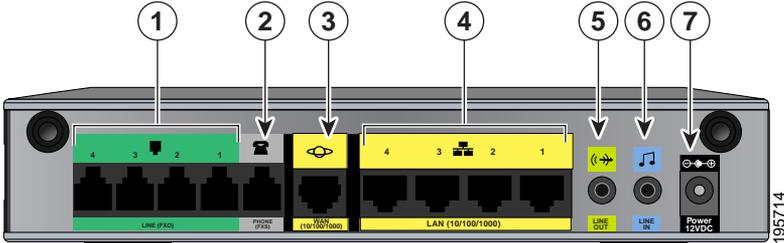

1	LINE (FXO) Connect phone lines for traditional phone service.
2	PHONE (FXS) Connect an analog phone or fax machine.
3	WAN Connect to the broadband network access device or to an uplink port on an Ethernet switch that is connected to the Internet.
4	LAN Connect IP phones and other network devices.
5	LINE OUT Connect to an external speaker system.
6	LINE IN Connect to an external music source for Music On Hold service (optional).
7	POWER Connect to a power source. Use only the provided power adapter. Optionally, you can use the power cord retention clamp to prevent accidental removal of the power cord. See instructions in the Cisco UC320W administration guide.

Side Panel

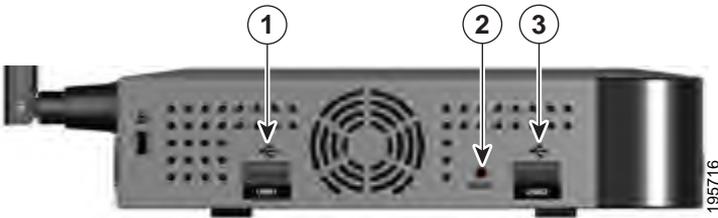

1, 3	<i>For future use.</i>
2	RESET - Using a paperclip or similar object, press this button briefly to restart the unit. Press and hold for 10 seconds to restore the factory default settings.

4

Where to Go From Here

Support	
Cisco Small Business Support Community	www.cisco.com/go/smallbizsupport
Cisco Small Business Support and Resources	www.cisco.com/go/smallbizhelp
Phone Support Contacts	www.cisco.com/go/sbsc
Cisco Small Business Firmware Downloads	www.cisco.com/go/software
Product Documentation	
Unified Communications UC320W	www.cisco.com/go/uc300
Smart Designs	www.cisco.com/go/partner/smartdesigns
SPA300 Series IP Phones	www.cisco.com/go/300phones
SPA500 Series IP Phones	www.cisco.com/go/spa500phones
SA500 Series Security Appliances	www.cisco.com/go/sa500
ESW500 Ethernet Switches	www.cisco.com/go/esw500help
SPA8800 IP Telephony Gateway	www.cisco.com/go/gateways
Cisco Small Business	
Cisco Partner Central for Small Business (Partner Login Required)	www.cisco.com/web/partners/sell/smb
Cisco Small Business Home	www.cisco.com/smb

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA

www.cisco.com

Small Business Support US: 1-866-606-1866 (Toll Free, 24/7)

Small Business Support, Global: www.cisco.com/go/sbsc



78-19296-01 Rev. B0

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

© 2011 Cisco Systems, Inc. All rights reserved.